


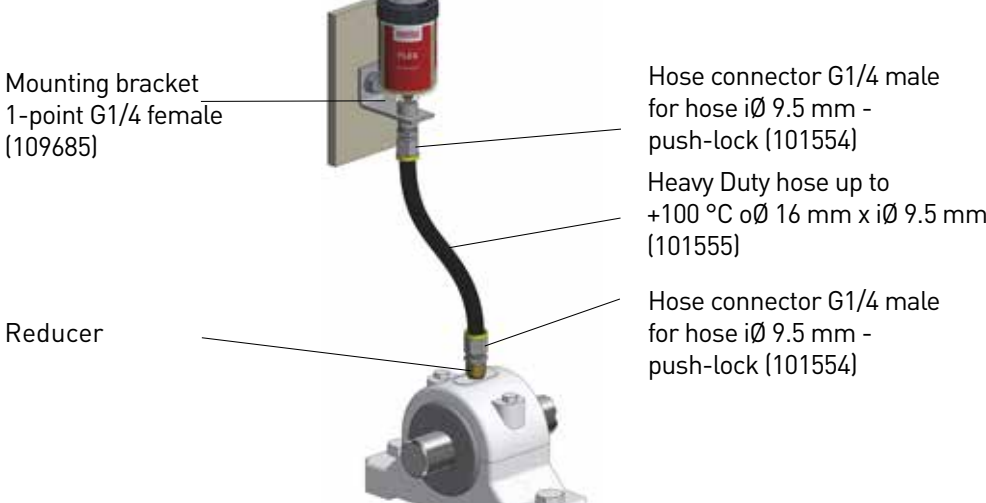
perma FLEX - Quick Start Guide

1. Predefine installation / Select lubricant, discharge period + connecting parts

Examples: Bearing lubrication



Direct mounting



Mounting bracket 1-point G1/4 female (109685)


Reducer

Hose connector G1/4 male for hose iØ 9.5 mm - push-lock (101554)

Heavy Duty hose up to +100 °C oØ 16 mm x iØ 9.5 mm (101555)

Hose connector G1/4 male for hose iØ 9.5 mm - push-lock (101554)


Remote mounting → for lube-points with vibration, limited mounting space, high temperature



360°


Select a suitable lubricant for perma FLEX

→ e. g. perma Multipurpose grease SF01




Select discharge period

→ e. g. with perma SELECT Software




(refer to our product catalog for details)


2. Prepare lube-point

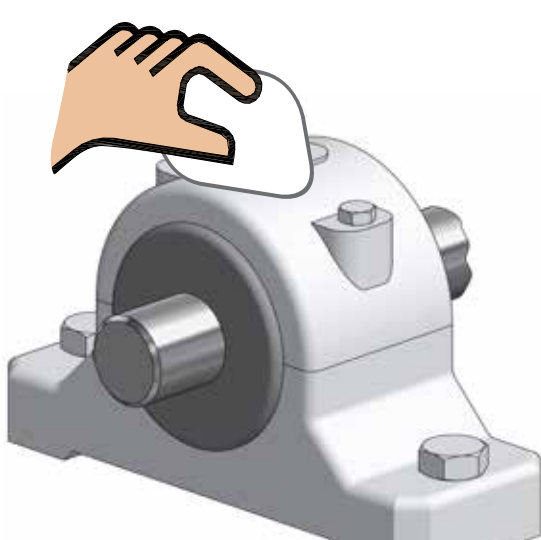


Clean lube-point

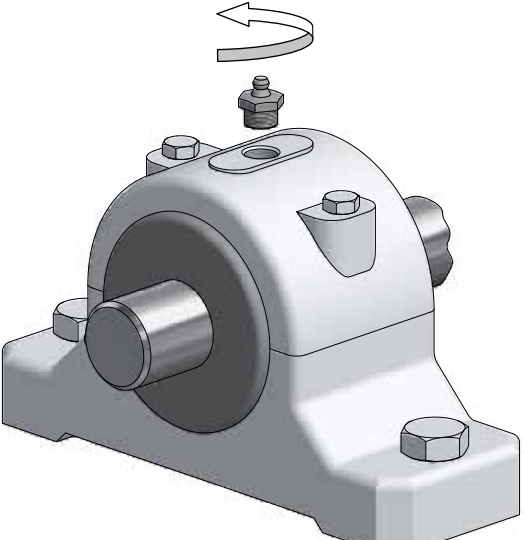


Remove grease fitting

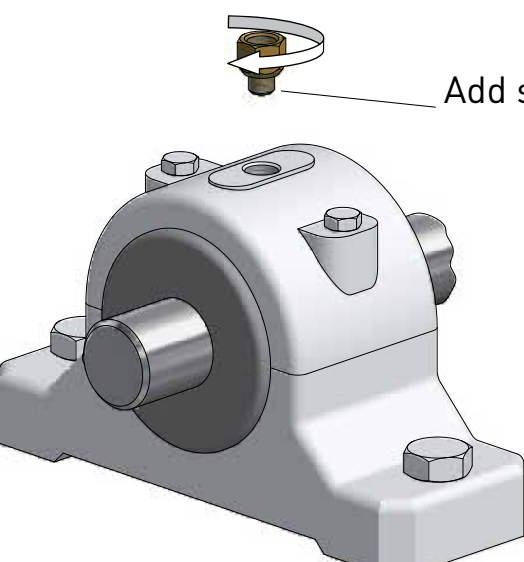


Add sealant

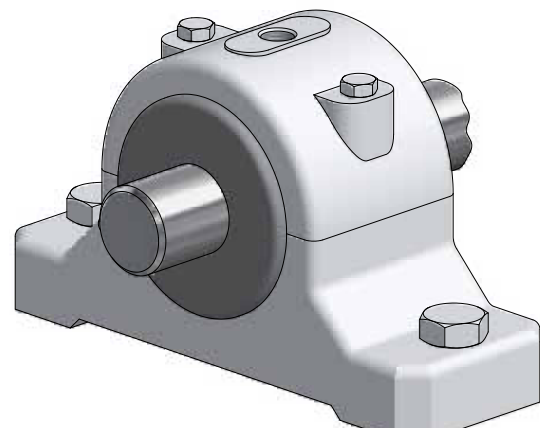


Add reducer and tubes (if required)

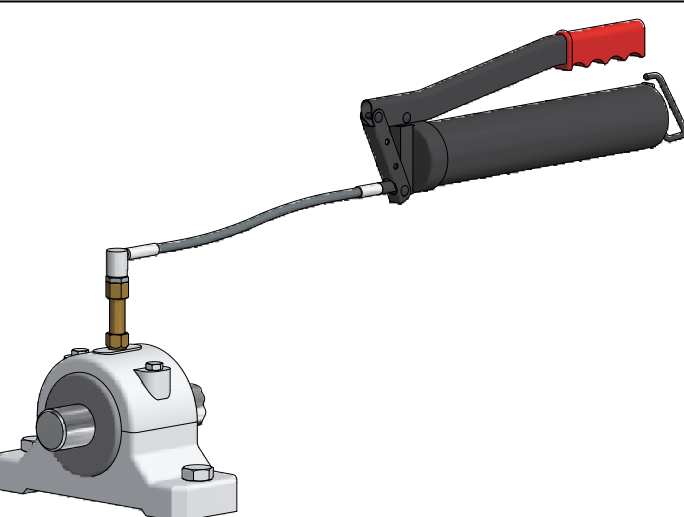

For direct mounting:
Prefill lube-point and any connecting parts
(use the same grease that is contained in the lubrication system)

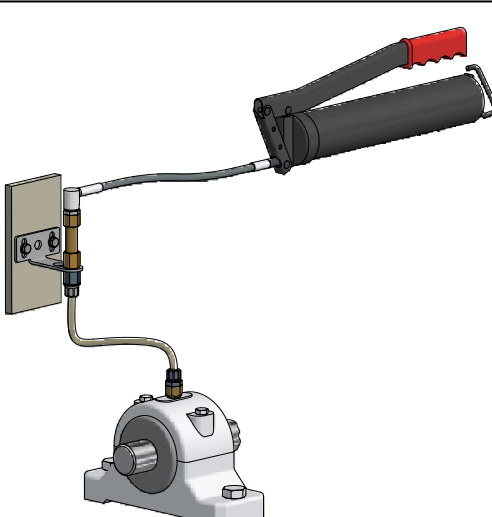


For remote mounting:
Prefill lube-point and any grease lines / connections
(use the same grease that is contained in the lubrication system)

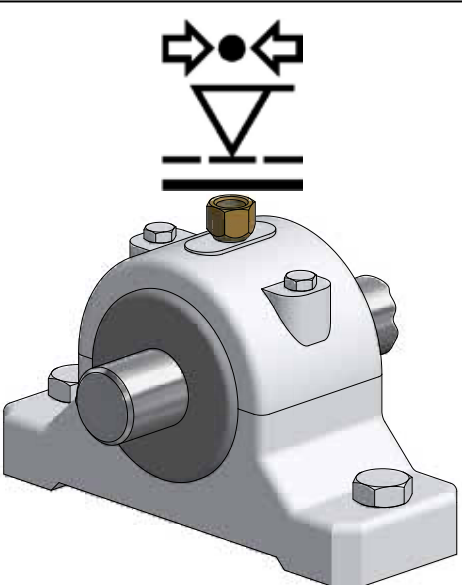



Pressure check: Lube-point / all connecting parts
(refer to perma FLEX installation guide for details)

3. Activation / Installation of lubrication system




Turn switch to set discharge period

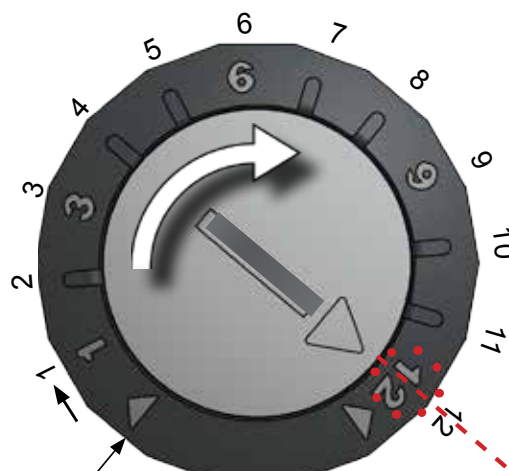


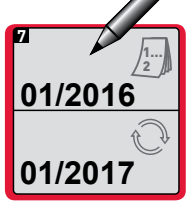

Note activation / exchange date on label



Remove plug

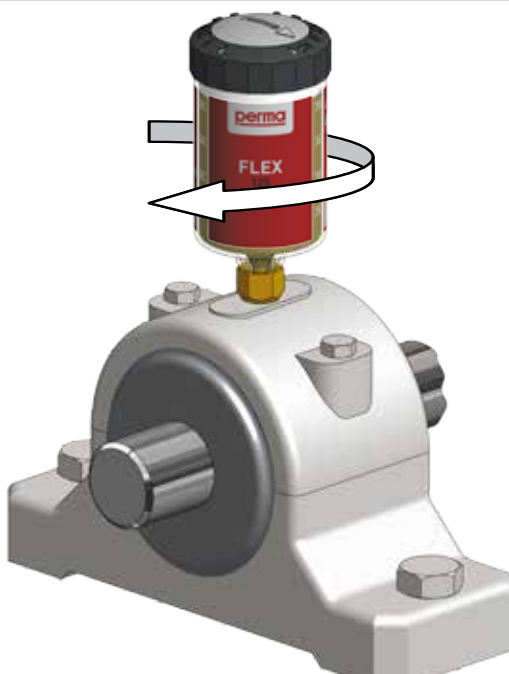

→ www.perma-tec.com

perma

© 2016/03 · Version: 2.0 · Art. No.: 103772