

perma CLASSIC - Quick Start Guide

1. Predefine installation / Select lubricant, discharge period + connecting parts

Examples: Bearing lubrication

Direct mounting

Reducer

Mounting bracket 1-point G1/4 female (109685)

Hose connector G1/4 male for hose iØ 9.5 mm - push-lock (101554)

Heavy Duty hose up to +100 °C oØ 16 mm x iØ 9.5 mm (101555)

Reducer

Hose connector G1/4 male for hose iØ 9.5 mm - push-lock (101554)

Remote mounting → for lube-points with vibration, limited mounting space, high temperature



Select a suitable lubricant for perma CLASSIC
→ e. g. perma Multipurpose grease SF01

Select activator screw
→ e. g. with perma SELECT Software

= 1 month = 3 months = 6 months = 12 months

(refer to our product catalog for details)

2. Prepare lube-point

Clean lube-point

Remove grease fitting

Add sealant

Add reducer and tubes (if required)

For direct mounting:
Prefill lube-point and any connecting parts
(use the same grease that is contained in the lubrication system)

For remote mounting:
Prefill lube-point and any grease lines / connections
(use the same grease that is contained in the lubrication system)

Pressure check: Lube-point / all connecting parts
(refer to perma CLASSIC installation guide for details)

3. Activation / Installation of lubrication system

Gas generator OK

KLACK! KLACK! =OK

Note activation / exchange date on label

Remove plug